

# AIRPORT DIAGRAM

FARGO/HECTOR INTL (FAR)  
FARGO, NORTH DAKOTA

AL-144 (FAA)

ATIS 124.5 379.2  
FARGO TOWER  
133.8 290.4  
GND CON  
121.9 348.6  
CLNC DEL  
121.9 348.6

46° 56' N

ELEV 900  
81

AIR CARGO

ILS HOLD  
ARM/DISARM PAD  
FBO FACILITIES

NORTH GENERAL AVIATION RAMP

ELEV 896  
6

086.2° →

6300 X 100

ELEV 897  
27


NC-1, 03 JUL 2008 to 31 JUL 2008

TERMINAL RAMP

RWY 9-27  
S60, D100  
RWY 13-31  
S26, D35  
RWY 18-36  
S100, D200, ST175, DT400, SBT400, AUW847

AIR CARRIER TERMINAL BUILDING  
CONTROL TOWER 1006

 46° 55' N



JANUARY 2005 ANNUAL RATE OF CHANGE 0.1° W

FIELD ELEV 902  
133.1°

9000 X 150

NORTH DAKOTA AIR NATIONAL GUARD RAMP

CRASH FIRE RESCUE

ELEV 895

ARM/DISARM PAD

ANG MAIN HANGARS

ANG OPERATIONS

US CUSTOMS

FBO HANGARS

HANGAR

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.  
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

96° 49' W

96° 48' W

NC-1, 03 JUL 2008 to 31 JUL 2008

# AIRPORT DIAGRAM

FARGO, NORTH DAKOTA  
FARGO/HECTOR INTL (FAR)