

07298

AIRPORT DIAGRAM

BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)
AL-804 (FAA) BALTIMORE, MARYLAND

ATIS 115.1 127.8
BALTIMORE TOWER
119.4 257.8
GND CON
121.9
CLNC DEL
118.05

324 Δ

39°12'N

Rwy 10 ldg 9952'
Rwy 28 ldg 10002'


RWY 4-22
S100, D220, ST175, DT500, DDT728
RWY 10-28, 15R-33L
S100, D220, ST175, DT500, DDT790
RWY 15L-33R
S30, D60

JANUARY 2005
ANNUAL RATE OF CHANGE
0.0°W



NE-3, 03 JUL 2008 to 31 JUL 2008

NE-3, 03 JUL 2008 to 31 JUL 2008

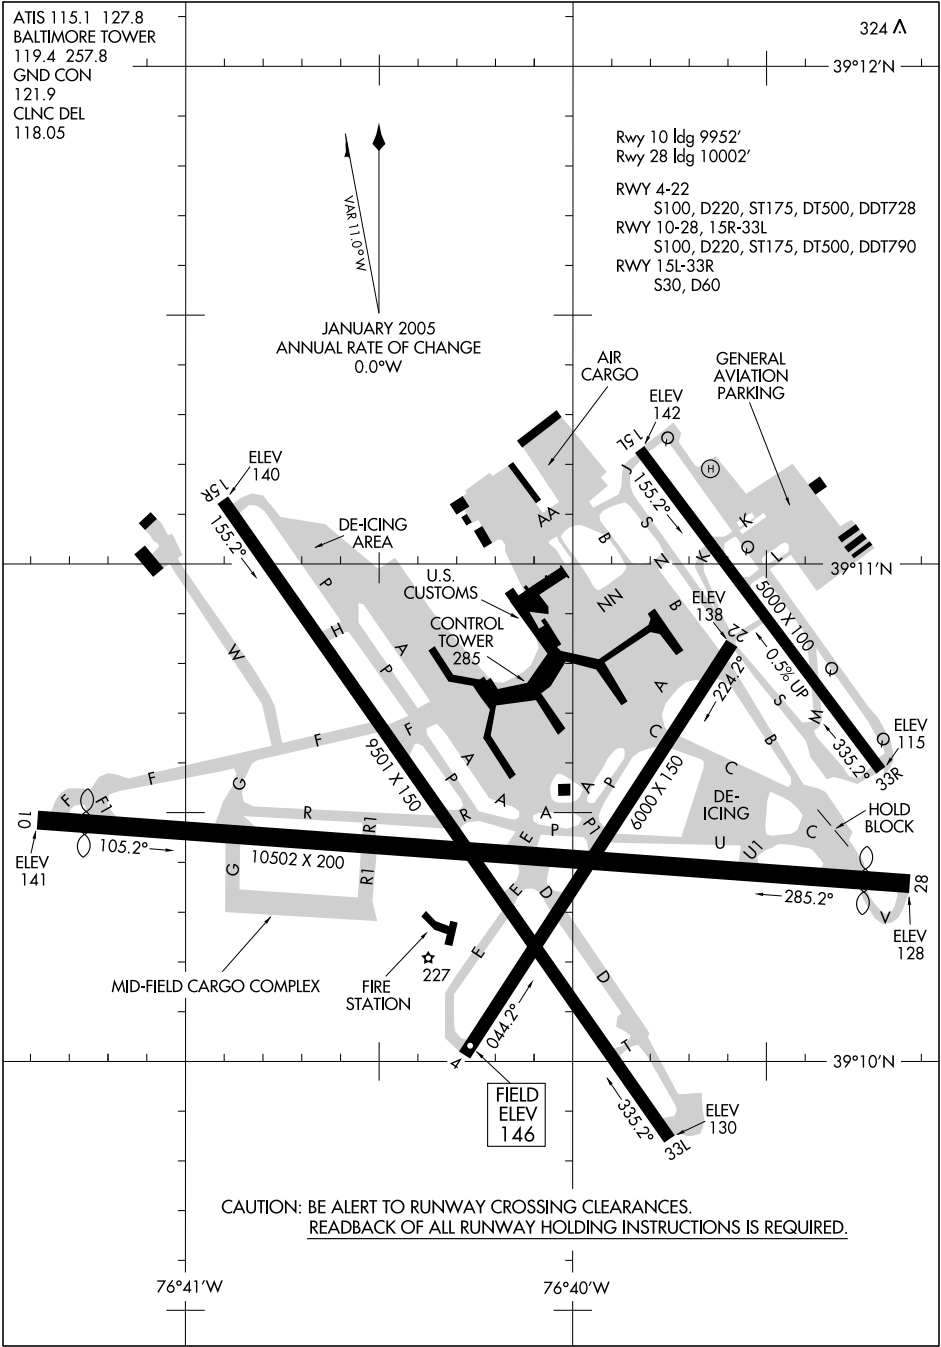

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

76°41'W

76°40'W

39°10'N

AIRPORT DIAGRAM

BALTIMORE, MARYLAND
BALTIMORE/WASHINGTON INTL THURGOOD MARSHALL (BWI)

07298